

# FREQUENTLY ASKED QUESTIONS

## WHAT IS A FLYcon™? HOW DO I DRAW ONE?

A FLYcon™ is the starting point to run an application on FLY™ Paper. To draw a FLYcon, follow these steps:

1. **Print** the letter(s). 
2. **Circle** the letter(s). 

## WHY DOESN'T THE PENTOP COMPUTER RESPOND IMMEDIATELY?

The Pentop Computer **waits** a few seconds to make sure you're done writing.

To go faster, you can **double tap** or tap the **ENTER** button.



## I'M STUCK. WHAT CAN I DO?

- If you get stuck, tap the **HELP** button. 
- If you missed some instructions, tap the **REPEAT** button to hear them again. 
- To **start** an application, draw or tap a FLYcon.
- To **select** an option, tap to the right of the FLYcon.



 
## TRY IT!

Put together everything you've learned and try FLYtype™ Practice:

1. **FLYcon:**  
Draw the FLYcon for FLYtype Practice. 
2. **Scroll & Select:**  
Tap below the FLYcon to scroll to the "Scratch Pad" option, and then tap to the right of the FLYcon to select it.  scroll select
3. **Write:**  
Write some words. *Have fun*


## HOW DO I NAVIGATE?

After drawing a FLYcon, tap above, below, right, or left to navigate the application menu. Tap on the FLYcon to hear your current location.

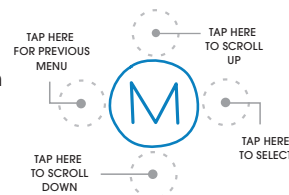

**Tip:** To return to an application, tap the center of the FLYcon to reactivate the tapping areas.

## WHAT'S ON MY PENTOP COMPUTER?

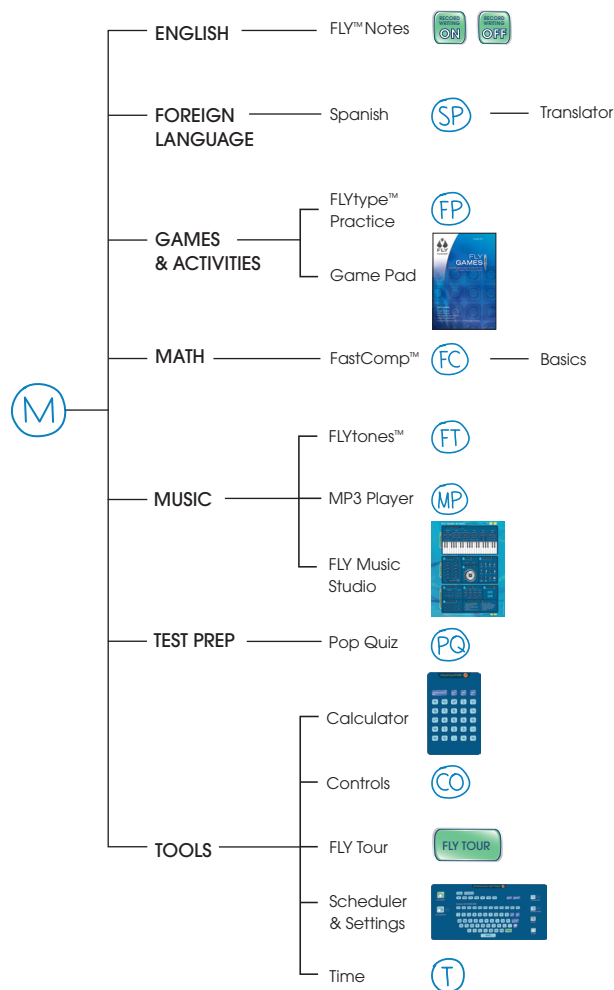 

## HOW DO I TROUBLESHOOT MY HANDWRITING WITH THE PENTOP COMPUTER?

- Leave space between words and between lines.
- Don't write too close to the bottom edge of a page.
- Write in **FLYtype** (see below):
- Don't cover the camera (located near the writing tip) with your finger.
- Don't run your letters together.

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z  
a b c d e f g h i j k l m n o p q r s t u v w x y z  
0 1 2 3 4 5 6 7 8 9

 
# APPLICATION REFERENCE

Here's a list of applications included on your FLY Fusion™ Pentop Computer.

## FLY™ NOTES


Upload what you write or draw to your computer.

1. **Tap** the "Notebook Activation" sticker on the front cover. This tells the Pentop Computer which notebook you're writing in.
2. **Tap** the "Record Writing ON" button in your FLY™ Notebook.
3. **Write** or draw anything you want. Tap the "Record Writing OFF" button when you're done.
4. **Connect** the Pentop Computer to your computer with the USB cable.

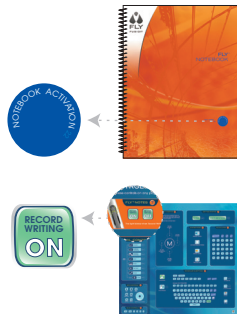


## FLYtones™

 Draw a multi-voice keyboard and drums. Record a tune and use it as your startup sound.

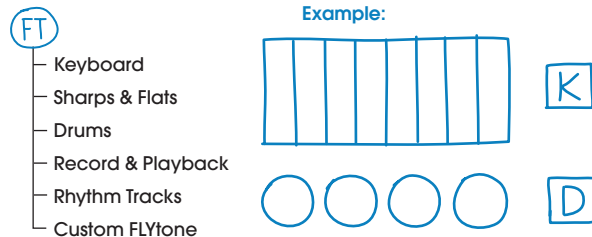


## MP3 PLAYER

 Draw your own MP3 controls.



## SPANISH: TRANSLATOR

 
Translate words from English to Spanish or Spanish to English. Hear multiple translations and parts of speech.

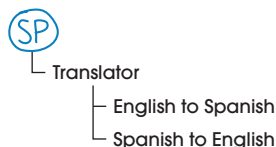

**Example:**  
happy

## POP QUIZ

 Create your own virtual flashcards. Enter what you want to memorize, and Pop Quiz will help you study.

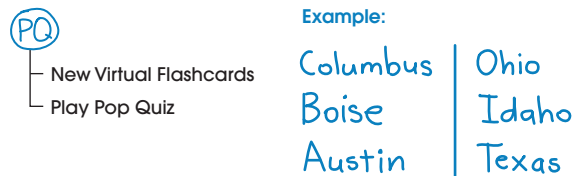

## FLYtype™ PRACTICE

Write words and hear them spoken back. Practice writing FLYtype or play a game!



**Example:**  
hello

## FastComp™: BASICS

 
Do quick calculations. Use Basics for math problems using addition, subtraction, multiplication, and division. You can also work with fractions, decimals, parentheses, and exponents.



**Example:**  
 $\frac{9}{4} + \frac{8}{5} =$

## CONTROLS

Draw your own FLY Notebook Control Panel buttons.

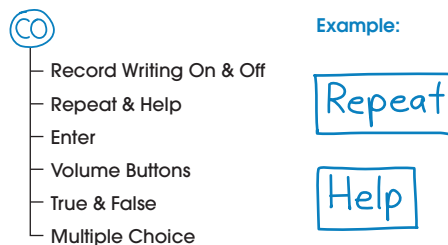

## TIME

Hear the current time and date.

