



COMMANDOBOT 4®

Adult Assistance Recommended!



You are the Master!

Congratulations! You are now the master of the most advanced voice-recognition robot ever built, CommandoBOT4! By using the special remote handset, you can command CommandoBOT to do whatever you desire! Equipped with the ability to follow ten different voice commands, a functional "claw" to grab, carry and release objects, missiles that launch and an illuminating spotlight "eye", this robot is sure to get the job done while providing you with hours and hours of enjoyment! And with the special Voice Broadcast Mode, you can now be in two places at once!

Quick Start

CommandoBOT

- 1.) First Time Installation - Remove the "Try Me" battery pack from the bottom of the CommandoBOT as detailed on the label. (See Figure A)

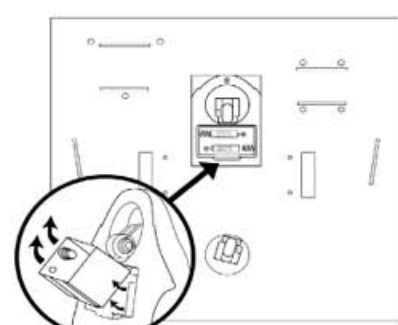 


Figure A

Please dispose of this battery pack - it is for "Try Me" use only.

- 2.) Insert one "9-volt" battery with the positive (+) and negative (-) ends facing in the direction indicated inside the battery compartment. (See Figure B)
Snap the cover back into place. You can find the cover taped to the bottom of your CommandoBot.


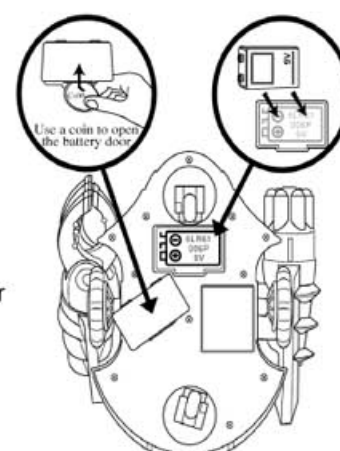 


Figure B

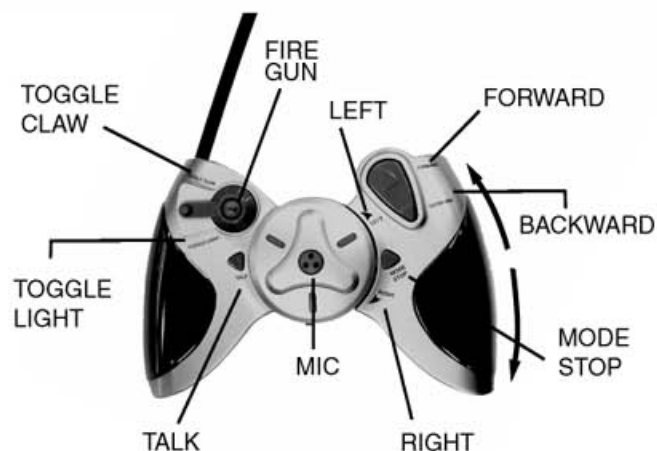 

- 3.) Use a Phillips screwdriver to unscrew the battery cover from the back of the robot. Insert four "D" batteries with the positive (+) and negative (-) ends facing in the direction indicated inside the battery compartment. Replace the cover and screw. (See Figure C)

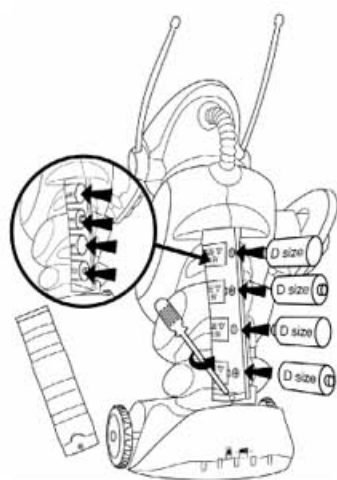 


Figure C

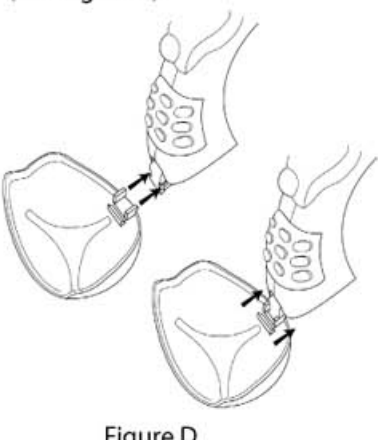 


Figure D

- 4.) Slide the Keypad Guard onto the front of your robot directly in front of the keypad until it snaps into place. (See Figure D)

Note: The Keypad Guard can be lowered and used as a tray to transport small objects from one place to another.

Handset

- 1.) Gently press and slide to remove the battery cover on the bottom of the handset. (See Figure E)



Figure E

 
- 2.) Insert one Alkaline "9-volt" battery with the positive (+) and negative (-) ends facing in the direction indicated inside the battery compartment. Slide the cover back into place. (See Figure F)

Safety Battery Usage

Do not use rechargeable batteries. Non-rechargeable batteries are not to be charged. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are not to be short-circuited. The supply terminals are not to be short-circuited. Do not dispose of batteries in fire; batteries may explode or leak. Batteries should be replaced by an adult.

QUICK REFERENCE GUIDE

Battery Replacement - With a coin, gently flip up the battery compartment door from the bottom of the robot.

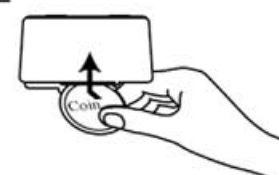

Battery Installation and Voice Training

1. Install 4, D Cell batteries in the back and 1, 9 Volt battery in the bottom of the CommandoBot, and 1, 9 Volt battery in the handset controller.
2. Slide the ON/OFF switch on the lower back of the CommandoBot to the ON position, the Robot Power Light will glow red.
3. Slide the ON/OFF switch on the handset to the ON position. Your CommandoBot will begin prompting for voice command training. If no prompting is heard, press and hold both the Stop/Mode button and the Talk button for 10 seconds. To stop training the voice commands and activate the headset control only, press and hold the MODE/STOP button for 1 second. Training will automatically begin again the next time the controller is turned on.
4. When training is complete, the CommandoBot will run through a System Check.

Commanding Your CommandoBot

At all times you can use the Handset Controller to control your CommandoBot; after you have trained the voice commands, you can use both your Voice and the Handset for ultimate control.

Giving a voice command:

1. Speak the name of the CommandoBot as you trained it. You should hold the controller 8-12 inches from your mouth and speak into the microphone.
2. CommandoBot will say "Master" when he understands his name.
3. Speak one of the command words as you trained it: Forward, Back, Left, Right, Stop, Fire Gun, Claw, Toggle Lights, System Check, and Blitz.

Using Room Guard

Arming and Disarming the Room Guard:
To Arm, press EXE. You will hear a series of tones.
To Disarm, press the four-digit Secret Code and EXE. The preset code is 1234.
Setting a new Room Guard Secret Code:
i. Press the PRG button on the keypad.
ii. Enter the current Secret Code (preset is 1234) and press EXE.
iii. After the beep, enter the new four-digit code and press EXE to save.



Resetting CommandBOT

Press the RESET button located to the power switch.

LIMITED 90 DAY WARRANTY

MGA Entertainment warrants to the original consumer purchaser this product that the product will be free from defects in material or workmanship for a period of 90 days from the date of original purchase. This warranty does not cover damages resulting from misuse, improper or abnormal usage, negligence, leaking batteries, improper service or other causes not arising from defects in material or workmanship. During this 90 day warranty period, the product will be either repaired or replaced (at MGA's option) at no charge to the purchaser, when returned to either the retailer with its original sales receipt (containing date of purchase) or to MGA. The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product. All product returned to MGA must be shipped prepaid and insured for loss or damage to:

MGA Entertainment
Repair Department
16730 Schoenborn Street
North Hills, CA 91343-6122

Any returned product should be carefully packed in packing material sufficient to avoid damage during shipment. Please include a written description of the defect, a copy of the original sales receipt (containing date of purchase) and your printed name, address and telephone number. Some states do not allow limitations on how long an implied warranty last or the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights and you may also have other rights which vary from state to state.

This warranty is only valid within the United States and Canada.

Please keep this manual It contains important information

CommandoBOT®
is a registered trademark
of MGA Entertainment
TM. © & © 2001 MGA Entertainment
All Rights Reserved.
16730 Schoenborn St.,
North Hills, CA 91343 USA

Training CommandoBOT

CommandoBOT is trained to respond only to his Master. You will need to train him to recognize your voice by speaking to him through the handset. There are ten voice commands that your robot will follow. Your robot will ask you to say each command twice. Once he has recognized and learned a command, he will automatically proceed to the next command. After the Training Procedure is completed, CommandoBOT will follow your commands through voice-recognition and by entering the commands via handset keypad.



In order to have CommandoBOT follow your voice commands correctly every time you command him, he must recognize your voice and commands. Therefore, it is very important that, when commanding your robot, you speak the commands in very much the same way during the training procedure.

The Training Procedure

- 1.) Train your CommandoBOT in a quiet place. Sounds other than your voice can confuse CommandoBOT, making training difficult to finish, or voice operation unreliable.
- 2.) To begin training CommandoBOT, hold the handset at a distance of approximately 8-12 inches from your mouth and speak into the microphone located in the center. (See Figure G)
- 3.) After you have installed the batteries in both the robot and handset, and have switched them both on; you will hear CommandoBOT say, "I operate by your command. Speak and repeat your instructions. All commands must be identical. Proceed at the prompt. Say CommandoBOT." If you do not hear this, press and hold the MODE/STOP and TALK buttons on your handset for approximately 10 seconds and then release.
Quick Play - To stop training and use hand control only, press and hold the MODE/STOP buttons for 1 second. Voice training will automatically begin again the next time the controller is turned on.
- 4.) Say, "CommandoBOT."
IMPORTANT: If CommandoBOT does not understand you, he will let you know by saying, "Did not compute" or "Speak louder, followed by "Repeat." Simply, repeat the command again until he understands you.
- 5.) CommandoBOT will say, "Repeat." You will need to repeat "CommandoBOT" exactly as you spoke it the first time.
- 6.) After CommandoBOT has recognized his name and your voice, he will then ask that you speak and repeat specific operating commands. The commands are: Forward, Back, Left, Right, Stop, Fire Gun, Blitz, Claw, Toggle Lights, System Check.
- 7.) When the commands have successfully trained, CommandoBOT will automatically perform a System Check.
- 8.) After the System Check has been completed, CommandoBOT will now be ready to follow your voice commands and handset keypad commands.

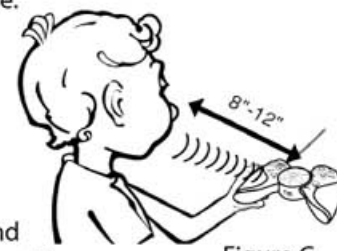 


Figure G