



Belly Button = **Teach Me to Dance**
Head Button = **Rock Out**
Flower Button = **Dance Party**
Belly & Head
(simultaneously) = **Chirp Mode**

NURTURE / DEFAULT MODE

- Pet her Head and Belly Buttons for surprise dances and sounds.
- Enter all other modes from this mode. See individual descriptions.
- To return to this mode from other modes, press the Flower Button.

If your Shimemies™ figure doesn't dance with her usual pep, ask an adult to change her batteries.

Y4793-0300

Visit FijiteFriends.com
©2012 Mattel. All Rights Reserved.

TEACH ME TO DANCE MODE

- From Nurture Mode, **press and hold the Belly Button** for 2 seconds to start.
- Use the Head Button to scroll songs; press the Belly Button to select.
- "Feel" the beat and teach it to her by pressing her Belly Button to the rhythm.
- To return to Nurture Mode, press the Flower Button.

ROCK OUT MODE

- From Nurture Mode, **press and hold the Head Button** for 2 seconds to start.
- Play music from an external source or sing to her.
- Press her Belly Button to the beat until her LED goes out; she'll dance.
- If you want to stop her dance, press the Head Button.
- To repeat her last performance, press and hold the Belly Button.
- To return to Nurture Mode, press the flower Button.

DANCE PARTY

- Your Shimemies™ figure can dance with other Shimemies™ figures! From Nurture Mode, **press their Flower Buttons** at the same time.
- To dance with a Newbie™ figure, press her Duet Button (flower on her belly) at the same time as you press the Flower Button on your Shimemies™ figure!

CHIRP MODE

- From Nurture Mode, **press and hold the Belly and Head Buttons** for 2 seconds (simultaneously) to start.
- Your Shimemies™ figure can interact with other Fijite Friends® characters. See the instruction manual and visit FijiteFriends.com to learn more!