

 
Fisher-Price® **Kasey**
the
Kinderbot™
LEARNING SYSTEM

**Your get-ready-
for-school
friend!**



Parent's Guide

2 Battery Compartments

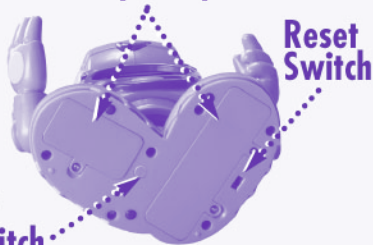

Reset
Switch

Tilt
Switch

When you pick Kasey up or tilt him, he stops moving.
Place him back on a level surface to resume movement.

Display Screen

4 Colored
Selection Buttons

Home Button

Power
Button

1

Getting Started

1. Install three “D” **alkaline** batteries in both battery compartments located on the underside of Kasey’s feet.
2. Be sure the Reset Switch (located on the underside of Kasey’s foot) is in the “on” position.
3. Press the Power Button on Kasey’s foot to bring him to life.
4. Adjust the Volume Dial to a comfortable listening level; adjust the Contrast Dial to make the image on the display screen darker or lighter.
5. Press a Colored Selection Button to go to an activity. Use the Colored Selection Buttons to answer questions too.

Tips and Hints

1. Use **only** the Colored Selection Buttons to make menu selections or answer questions.
2. Kasey should be positioned at or near your child’s eye level and on a level surface.
3. Press the Home Button to return to the previous menu; continue to press the Home Button to return to the main menu.
4. If Kasey seems to be stuck in a particular action, slide the Reset Switch on the underside of Kasey’s foot off and then back on.
5. Replace **all three batteries** with three, fresh “D” **alkaline** batteries when: the display on screen is difficult to see (after adjusting the Contrast Dial); sounds become faint or there are no sounds at all (and Volume Dial is turned all the way up); movement slows or stops; or the toy functions erratically.
6. This toy features an automatic shut-off, and will turn off if your child is not actively playing with it after about one minute. You can also turn power off by pressing the Power Button on Kasey’s foot.

 
Speaker

Interactive “Backpack”


Additional cartridges are sold separately to expand learning.

Volume Control Dial

Contrast Dial

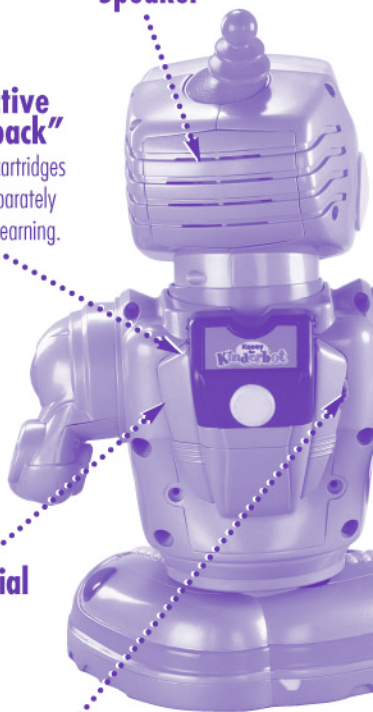

Battery Installation and Information

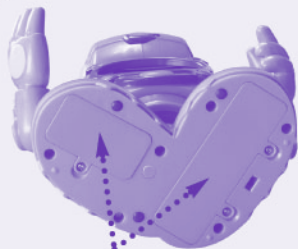 


2 Battery Compartments

Installation

- An adult must install batteries. Tool needed for battery installation: Phillips screwdriver (not included). Requires three “D” (LR20) **alkaline** batteries for operation (batteries not included).
- Locate both battery compartments on the underside of Kasey’s feet.
- Loosen the screws in the battery compartment doors with a Phillips screwdriver. Lift to remove the battery compartment doors.
- Insert three “D” (LR20) **alkaline** batteries as indicated inside both battery compartments in Kasey’s feet.
- Replace the battery compartment doors and tighten the screws in each door with a Phillips screwdriver. Do not over-tighten.

Hints:

 - We recommend using **alkaline** batteries for longer battery life.
- You can expect approximately 12 hours of power with each fresh set of batteries.

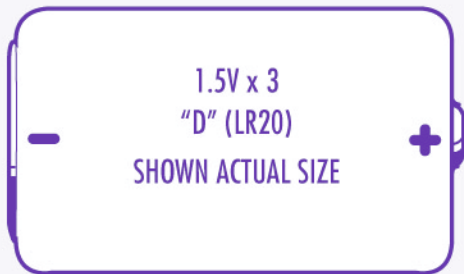


Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

 
- Kasey is not intended for use outdoors.
- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Please do not take this toy apart.
- Do not drop this toy on a hard surface.
- Keep this toy away from direct sunlight and excessive heat.
- Keep water, sand and dirt off this toy.

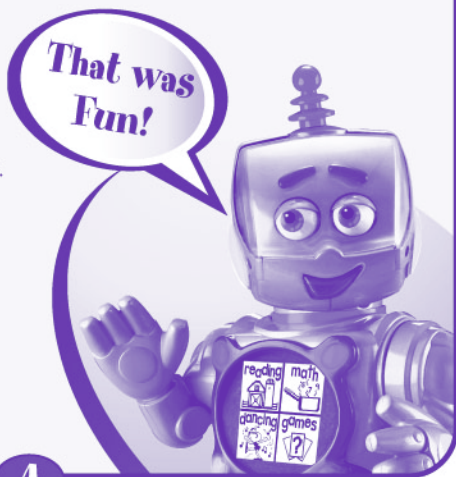

Oh, the Places We Can Explore!

Your child chooses from four different learning centers on the main menu. Press the Colored Selection Button next to the activity you would like to play.

 Hint: Press the Home Button below the display screen to return to the previous activity menu; continue to press the Home Button to return to the main menu.

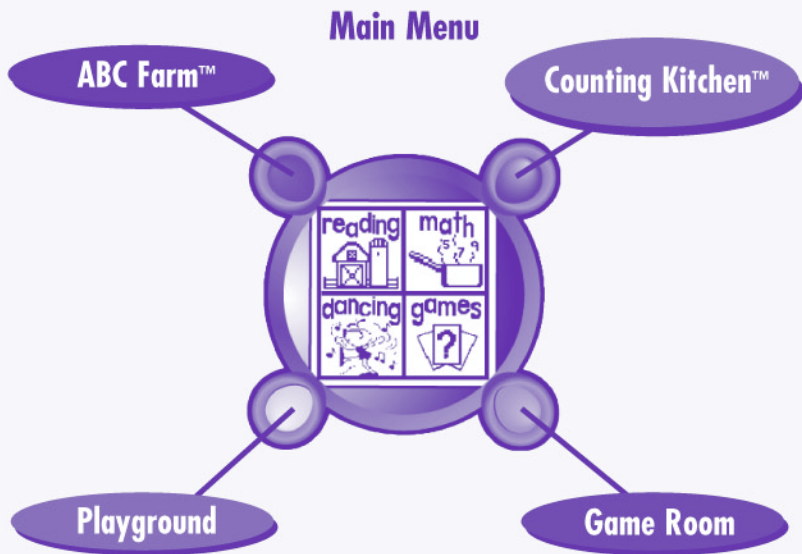

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2003 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. Trademarks of Mattel, Inc.

PRINTED IN CHINA

77899a-0920

ABC Farm™

Feed the Letters

Identify the correct letter and help feed it.



Letter Sounds

Listen to the letter sound and then find the correct letter.

Letter Barn

Help Kasey identify letters and match upper and lower case.

Farmer Wilkins' Farm

Match the animal to the letter it begins with and help identify the food it eats.

Counting Kitchen™

Kitchen Spy

Guess the answer to Kasey's question – it's either more or less.



Make Cookies

Help Chip™ find the correct shape.

Try Kasey's Recipes

Take turns following Kasey's recipe.

Kasey's Magnets

Pick a number magnet, then help Kasey put it in the correct order.

Playground

Stretch Break

Follow Kasey's directions. Walk like a penguin, jump like a rabbit – there are plenty of fun ways to stretch.



Tag Chip™

Press a selection button to tag Chip™. How many times you can catch her?

Dance

Use the lower Colored Selection Buttons to scroll through dance choices. When you find one that you like, select it by pressing an upper Colored Selection Button next to your choice. Then, groove to the music along with Kasey and Chip™.

Sing

Let's sing along with Kasey! Use the lower Colored Selection Buttons to scroll through music choices. When you find one that you like, select it by pressing an upper Colored Selection Button next to your choice.

Game Room

Help Chip™

Match the items in Chip™'s room to put them away.



Mixed-Up Masks

Match the mask with the mood.

Magic Kasey

Help Kasey remember which object popped out of his magic hat, find Chip™ hiding inside the magic squares, or figure out what's missing.

Kasey's Crazy Quiz Questions

Answer three questions correctly to win!

Troubleshooting Guide

Symptom

Solution

I've made a selection, but Kasey does not recognize it.

- Do not touch the screen to make selections. Always press the Colored Selection Button next to the screen.

I've pressed a Colored Selection Button, but Kasey does not recognize it.

- Do not make a selection until the Colored Selection Buttons light.
- Battery power may be weak. Replace **all** batteries with fresh, **alkaline** batteries. Do not mix old and new batteries.

You hear a snapping or grinding noise and one of Kasey's parts does not move.

- The moving parts are jammed because there may be an object lodged between them. Turn power off and remove the object.

Kasey stops moving when I pick him up or tilt him; but he still talks and his screen still functions.

- There is a Tilt Button on the underside of Kasey's foot. When you pick him up or tilt him, he will stop moving. When you place him back down, he begins moving again.

Kasey appears to be stuck in a particular action.

- You need to reset the electronics. Slide the Reset Switch on the underside of Kasey's foot to the off position and then back on.

After installing fresh batteries, Kasey seems to run for only one or two hours.

- You may have installed the wrong type of batteries. Use only **alkaline** batteries for longest battery life.

Kasey moves sluggishly.

- The batteries are dead or weak. Replace **all** batteries with fresh, **alkaline** batteries. Do not mix old and new batteries.

Screen images are faint.

- Adjust contrast by rotating the Contrast Dial.
- The batteries are dead or weak. Replace **all** batteries with fresh, **alkaline** batteries. Do not mix old and new batteries.

Kasey's voice is faint or he doesn't speak at all.

- Adjust volume by rotating the Volume Dial.
- The batteries are dead or weak. Replace **all** batteries with fresh, **alkaline** batteries. Do not mix old and new batteries.

Kasey functions erratically and Power Button does not work when pushed.

- Battery power is weak and you will need to reset the electronics. Slide the Reset Switch on the underside of Kasey's foot to the off position. Replace **all** three batteries with fresh, **alkaline** batteries. Do not mix old and new batteries. Slide the Reset Switch to the on position.

Consumer Information

Questions?

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price, Inc., Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants Kasey the Kinderbot™ is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.