

ELECTRONIC MAXX STEELE™ PERSONAL ROBOT

EASY REFERENCE GUIDE TO OPERATIONS

(STARTING MAXX) — (See TROUBLE SHOOTING GUIDE Page 5.)

OPERATING MODES

IMMEDIATE MODE

Press <POWER> twice (see 4.1 IMMEDIATE MODE in manual). Pressing other keys after that will select the specific action you want performed.

PROGRAM MODE

Press <PROGRAM> (see 4.2 PROGRAM MODE in manual). Each step is entered one at a time. Press <ENTER> to complete and store each program step. To run the program, press <EXECUTE>.

LEARN MODE

Press <LEARN> (see 4.3 LEARN MODE in manual). Maxx will respond by immediately performing each command you enter. Press <EXECUTE> to have him run his learned program.

EXECUTE MODE

Press <EXECUTE> (see 4.4 EXECUTE MODE in manual). Maxx will run a program which has been entered in the Program or Learn Mode.

GAME-PLAYING MODE

PRESS <GAME> (see 4.5 GAME-PLAYING MODE in manual).

SUMMARY OF COMMANDS AND FUNCTIONS

IN THE IMMEDIATE MODE

- *To Set the Clock, Press:*
<CLOCK>, <0> to advance hours, <1> to advance minutes (less than 1/2% accuracy).
- *To Set the Alarm, Press:*
<CLOCK>, <2> to advance alarm hours, <3> to advance alarm minutes.
- *To Move Maxx's Arms, Wrist and Claw, Press:*
<ARMS UP> or <ARMS DOWN>, <WRIST UP> or <WRIST DOWN> and <CLAW ROTATE>.
- *To Move Maxx Forward, Backward, Left or Right, Press:*
<FORWARD>, <REVERSE>, <TURN RIGHT>, or <TURN LEFT>. In <REVERSE> DIRECTION, LEFT and RIGHT TURNS ARE REVERSED.
- *To Play Music, Press:*
<SONG> twice and any of the first twelve keys on the controller, corresponding to the notes you want to play.