

MOONwalker™


Artificial Intelligence Has Reached Earth!

EI-188

Start To Play


Before you play with Moonwalker, please follow these simple steps:

1. Slide the "On/Off" switch to "Off" position.
2. Insert 2 new "AA" size alkaline batteries to obtain the best performance.
3. Then power on Moonwalker and place it down. Then Moonwalker will play with you.

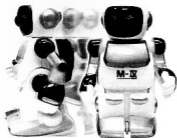

**BUMP & GO
FUNCTION**

Parts Description

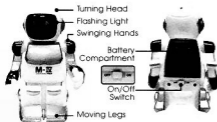


Battery Installation

Make sure the power switch is an "Off" position.

1. Use a philips head screw driver to loosen the screw(turn counter clockwise)on the battery compartment cover(Fig.1)
2. Insert 2 new "AA" size alkaline batteries with "+" & "-" signs as shown inside the battery compartment.(Fig.2)
3. Close the battery compartment cover use a philips head screw driver.



Specifications

Power Supply: 
Rating : DC 3V 12W
Batteries : 2 X 1.5V "AA"/ LR6 / AM3
Requires 2 x "AA" size alkaline batteries.
(not included)

Care & Maintenance

- Always remove batteries from the toy when it is not being used for a long period of time.
- Wipe the toy gently with a clean damp cloth.
- Keep the toy away from direct sunlight and/or direct heat.
- Do not immerse the toy into water that can damage the electronic assemblies.

Cautions

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries should not be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Notes

- New and Alkaline batteries are recommended to use in this toy to obtain the best and maximum performance.
- You are advised to replace with new batteries as soon as the function becomes impaired.
- Parental guidance is recommended when installing or replacing batteries.
- Users should keep and retain this information for future reference.
- Users should keep strict accordance with the manufacturer's instructions while operating the product.

Trouble Shooting

SYMPTOM	PROBLEM CAUSE	CORRECTION
Moonwalker does not move or run slowly.	<ul style="list-style-type: none">• Loose battery connection.• Main power switch is not in "ON" position.• Batteries are not placed in compartment correctly.• Batteries are exhausted.	<ul style="list-style-type: none">• Check battery connection.• Switch on the power.• Check the battery polarity.• Replace old batteries with new ones.
Moonwalker doesn't work after going through water.	<ul style="list-style-type: none">• Water in electronics area.	<ul style="list-style-type: none">• Moonwalker will take several hours to dry.

⚠ WARNING:
CHOKING HAZARD – Small parts.
Not for Children under 3 years.

Silverlit®

Silverlit Toys (U.S.A.) Inc.
P.O. Box 36608, City of Industry, CA 91715-0608
©2002 of Silverlit Toys Manufacturing Ltd. All rights reserved.
Visit us at: www.silverlit.com