

 
Mr. D.J.

INSTRUCTIONS

Insert batteries


- Push back battery compartment door as shown, then lift it off.
- Insert one 9 volt (MN 1604) battery. Next insert two "C" (MN 1400) batteries, putting the positive end of each in first.
- Slide cover back into place and snap shut. We recommend using Duracell batteries or other quality alkaline batteries.

Push and lift off battery door

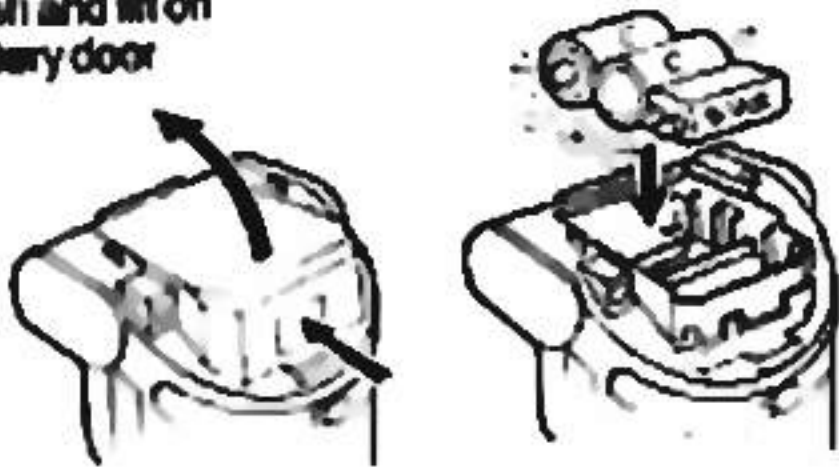

For poor reception or static:

- Make sure antenna is extended for FM.
- Carefully tune into radio station.
- Tune into a different station.
- Check to see if batteries need replacing.
- Try another location.

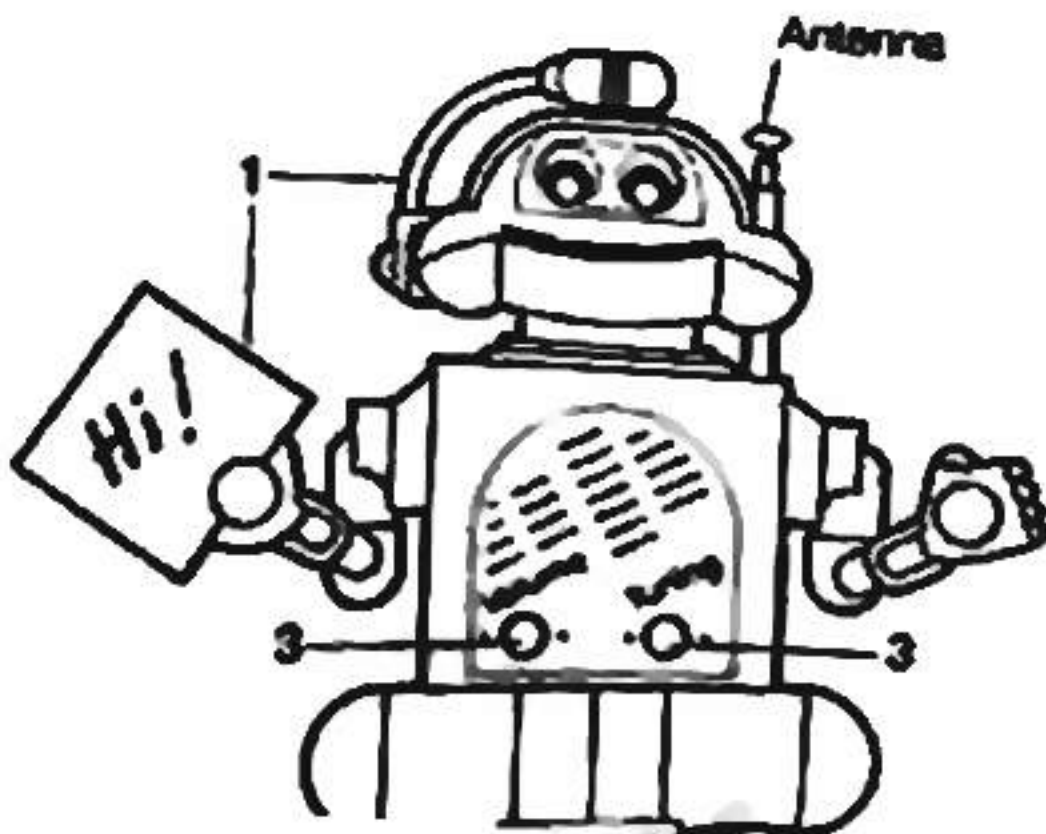

1. Pose arms, hands and microphone
Get Mr D.J. ready for action! Position the microphone by moving it up or down...pose both arms and hands...even rotate his wrists! And there's a slot in each of his hands to hold a thin lightweight object.

2. Select AM or FM

You can listen to AM or FM. Just move the switch to the one you want! If you are listening to FM, be sure to pull the antenna out fully to get good reception.

3. Turn on and tune in the radio

Mr D.J.'s mouth begins to move when you turn the volume knob on. Use the same knob to adjust the sound level. Use the tuning knob to select the station you want.


NOTE: Set the volume so that Mr D.J.'s mouth moves. If you set the volume too low, his mouth does not move...and if you set it too loud, his mouth stays open.

4. Make Mr D.J. move to the music

When the radio is ON, move the Off/on switch to "ON" and Mr D.J. goes into action. His eyes blink, his head turns and goes up and down, his arms move up and down and he rocks from side to side.

5. Play your own music

Plug a 1/8" mini plug (not included)...into the input jack and plug the other end into your tape recorder then play your own sounds instead of the radio!

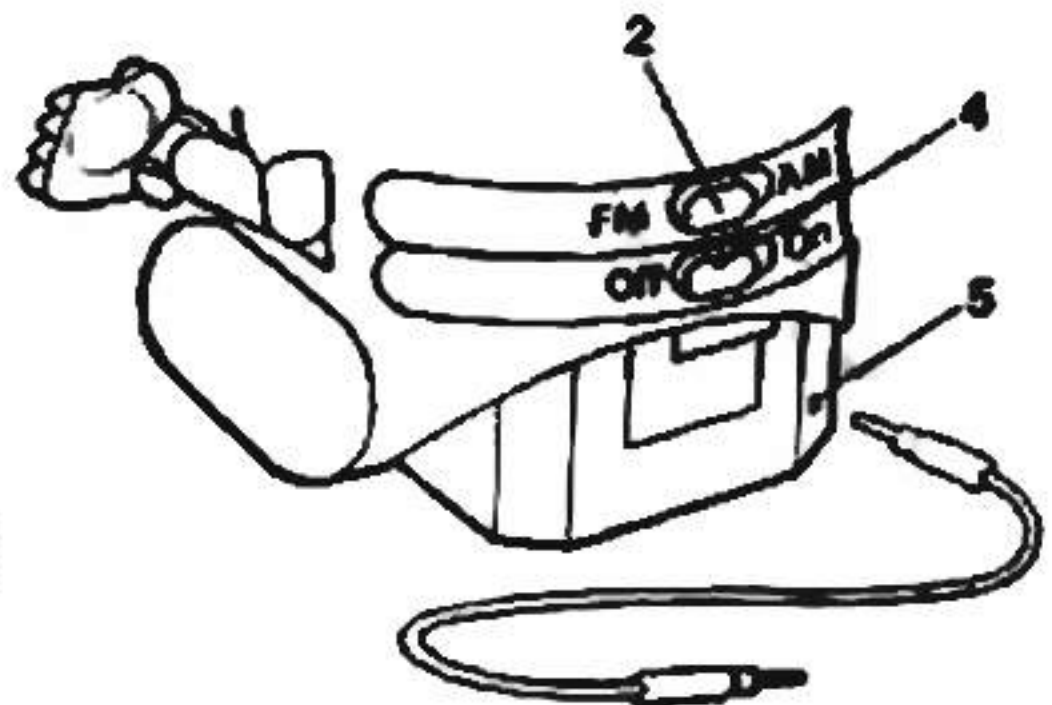

Back of Mr D.J.
(1/8" mini plug not included)